

F1G. 4

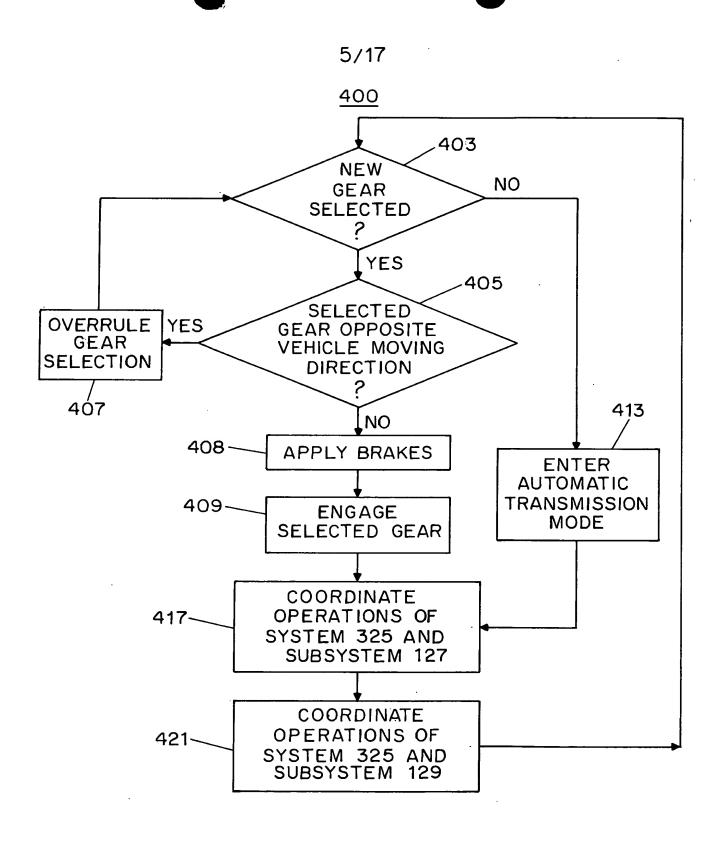


FIG. 5

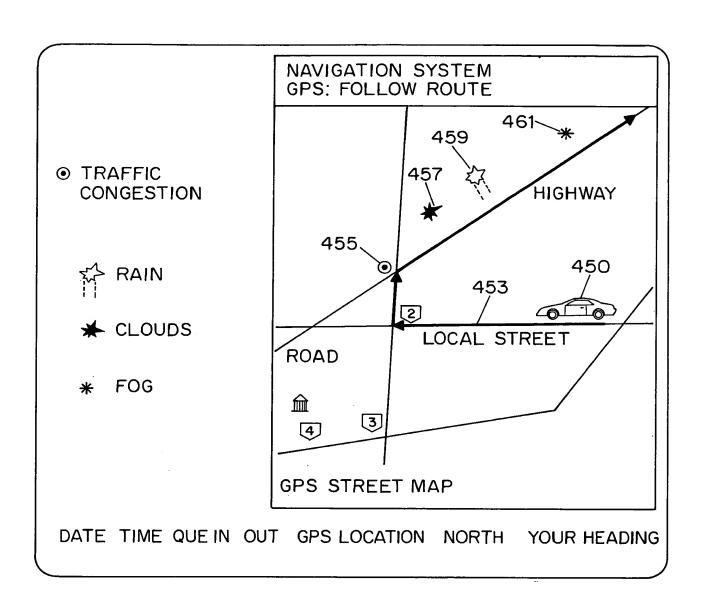
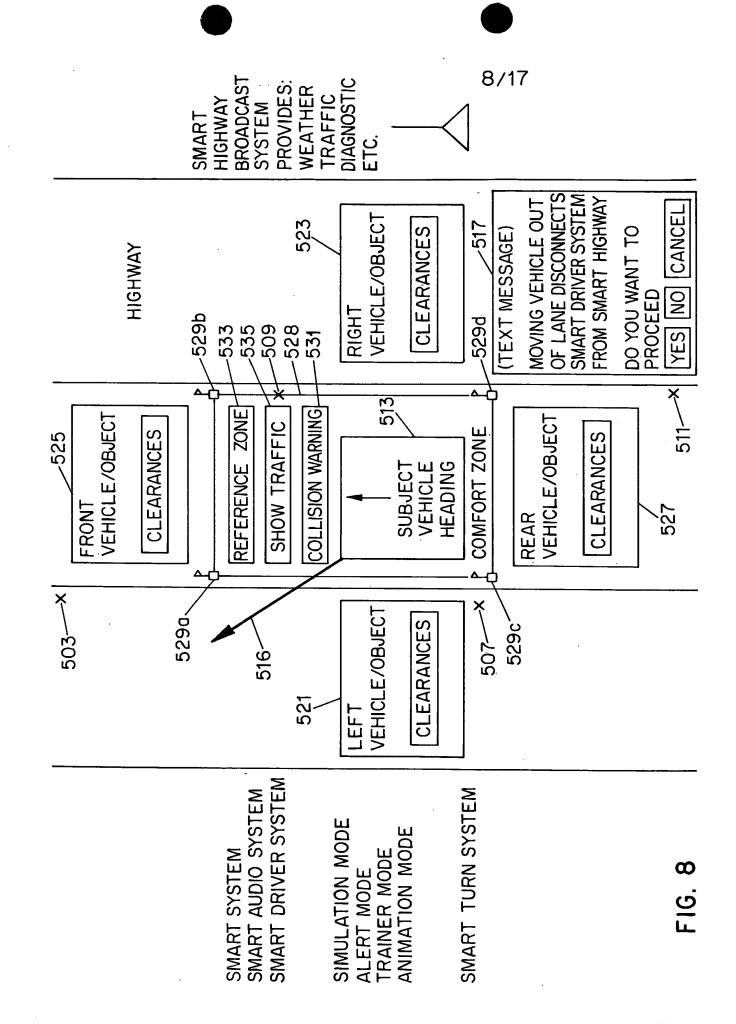


FIG. 6

F1G. 7



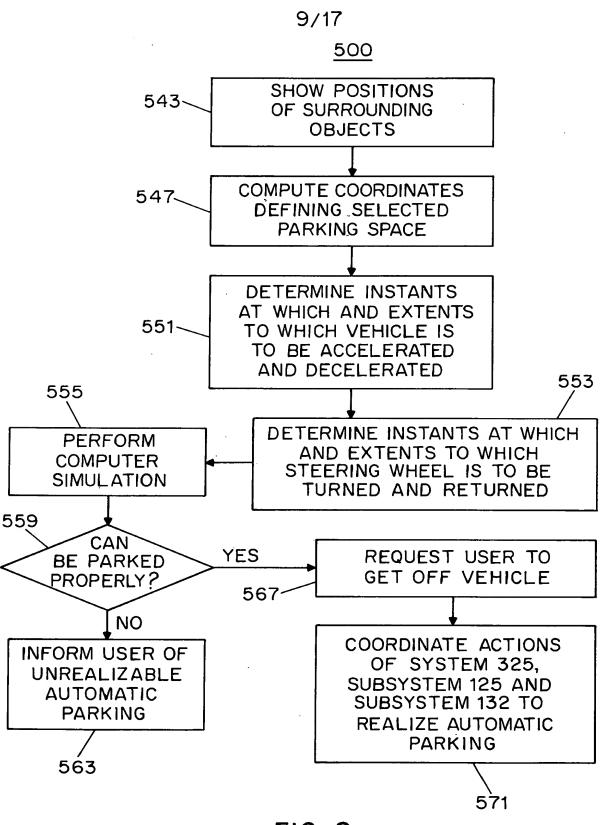


FIG. 9

10/17

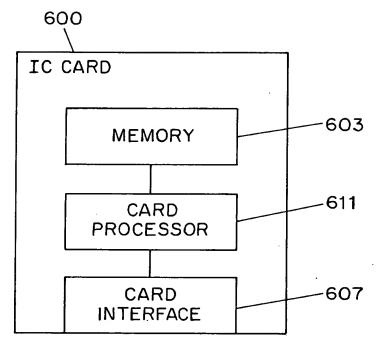


FIG. 10



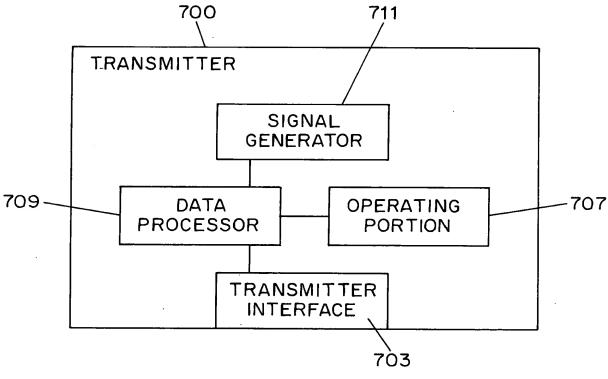


FIG. 11

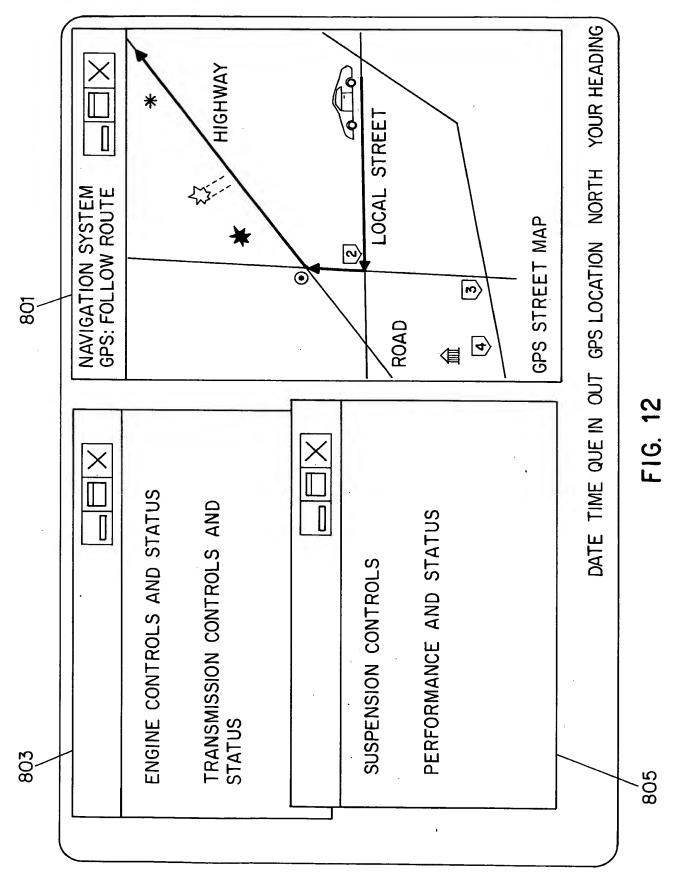

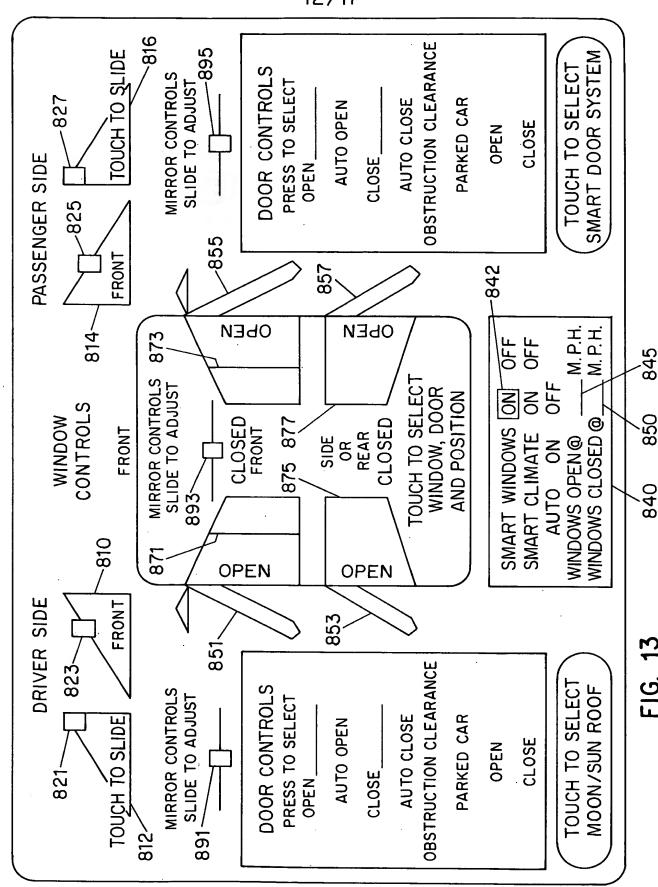

COSESIES CEOSOS

FIG. 13



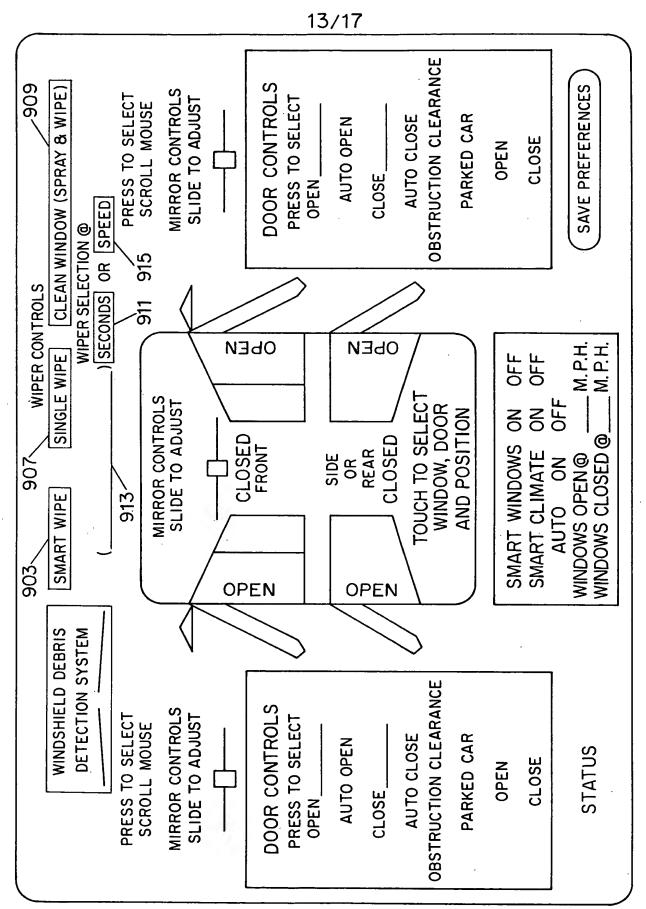


FIG. 14

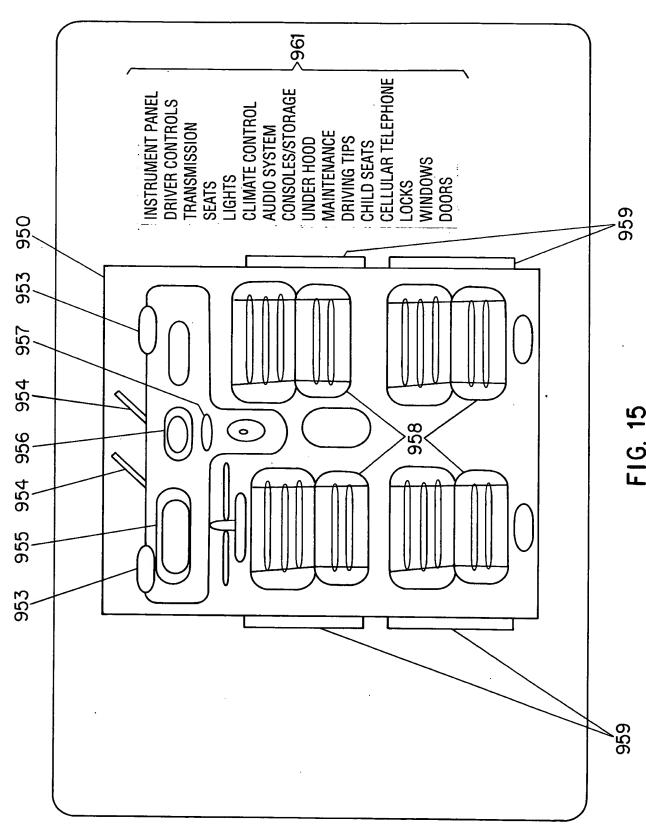

DAGETIES CHORDS

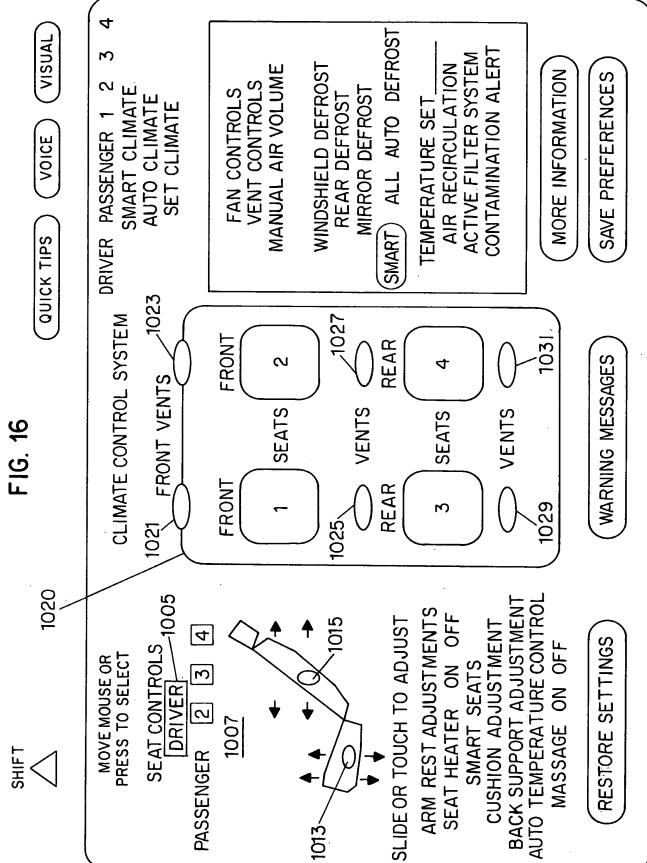

16/17

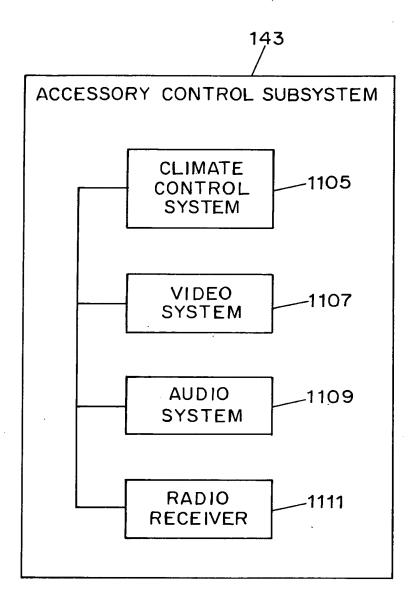


FIG. 17

1207

F1G. 18 **WEATHER BAND** OTHER RESTORE SETTINGS MORE INFORMATION SAVE PREFERENCES USER ICON 1247 1249 TREBLE \Diamond 1255 1257 RIGHT **RIGHT** BASS ARE HERE 9 LEFT LEFT MORE INFORMATION VOICE SET FOR: (DRIVER)\PASSENGER 1 ON OFF VOLUME CONTROL SMART AUDIO -1245FADER CONTROLS FRONT 251 BACK **AUTO RADIO** ANIMATION CD VIDEO TV SELECTION BEING PLAYED: PRESS EFFECT THEN **MOVE SPEAKERS FOR** XX SONG, XX ALBUM **DESIRED SOUND** SURROUND EFFECTS SPEAKER ROCK MOVIE ETC. STEREO ENCODED DOLBY DIGITAL ANIMATION TO HEAR AND CASSETTE QUICK TIP: PRESS 8 TALK/NEWS: (AM79.00) FM 89.9 FM 91.2 AM 98.6 AM 10.70 SEE DEMO FM107.90 RADIO AND TELEPHONE, RADIO STATIONS: XX LOS ANGELES, XX SANTA ANA STATIONS QUICK TIP: ANTENNA **LOWER ANTENNA** SWITCHED OFF TO IS ACTIVATED BY LISTENING **BOTH MUST BE** YOU ARE AM107.8 AUDIO SYSTEM (RADIO) <u>:</u> FM102.7 ** FM102.9 AM103.5 **AM990 -**₩ X IRVINE SAVE AREA SETTINGS YES NO FM 96.4 * SELECTIONS FROM MENU OR SCREEN QUICK TIP: SCROLL FOR FM98.1 USE MOUSE CONTROLS OR PRESS TO SELECT XX MORE STATIONS 10 COUNTRY: (FM100.7) FM 91.4 5ROCK: FM89.3 1275-2 CLASSIC: 1273